

Quick Installation

AT LEAST TWO (2) PEOPLE ARE REQUIRED TO MOVE AND MANEUVER THE PINBALL MACHINE. THE PINBALL MACHINE WEIGHS MORE THAN 100KG IN ITS BOX

TOOLS REQUIRED : Cutting pliers, 5/8" or 16mm socket wrench and cutter



- 1**
- Locate the side labeled **"CARRIAGE ON THIS SIDE ONLY"**. This is the underside of the pinball machine.
 - Cut the nylon straps holding the hat in place.
 - **⚠ Hold the steel loop firmly to avoid injury.**
 - Lift the hat.

- 2**
- With the help of an assistant, remove the body from the box.
 - Cut the vertical nylon strap, holding the steel buckle firmly to prevent injury.
 - Retrieve the accessory box, positioned on the backbox.
 - **⚠ Be careful not to damage the pinball machine.**

- 3**
- Open the accessory box and remove the eight (8) screws, four (4) feet and four (4) jacks.
 - **⚠ Do not cut the strap holding the backbox !**
 - Prepare the two (2) front feet by screwing in the jacks.
 - Install the feet and screw them in firmly.



- 4**
- With your assistant, carefully place the pinball machine on its front legs. Raise the rear of the box using a stand.
 - Prepare the two (2) rear feet by screwing in the jacks. Install the feet, then screw them in firmly.
 - Remove the bracket.



- 5**
- Cut the nylon strap holding the steel buckle, and remove the protective corners.
 - Carefully raise the backbox, holding the backglass in place with your hands and ensuring that the cables are not pinched.
 - Hook the latch connecting the body and the backbox to the back of the pinball machine.



- 6**
- Retrieve the door keys from the ball launcher.
 - Open the door and retrieve the backbox keys located at the back of the door.




- 7**
- Using these keys, unlock, lift and remove the backglass.
 - Lift up the speaker panel and place it gently on the glass.
 - Take the butterfly screw from the accessory box and screw it into the hole provided.
 - Replace the speaker panel and backglass.

THE PANE IS MADE OF TEMPERED GLASS. IT IS SENSITIVE TO TEMPERATURE CHANGES. STORE AT ROOM TEMPERATURE ON A SMOOTH SURFACE TO AVOID DAMAGE



- 8**
- Once you've opened the door, grab the yellow handle in the top right-hand corner.
 - Move it to the left, then lift the lockbar to access the glass.
 - Gently slide the glass towards you. Set it down safely.
 - **⚠ Be careful not to damage it.**

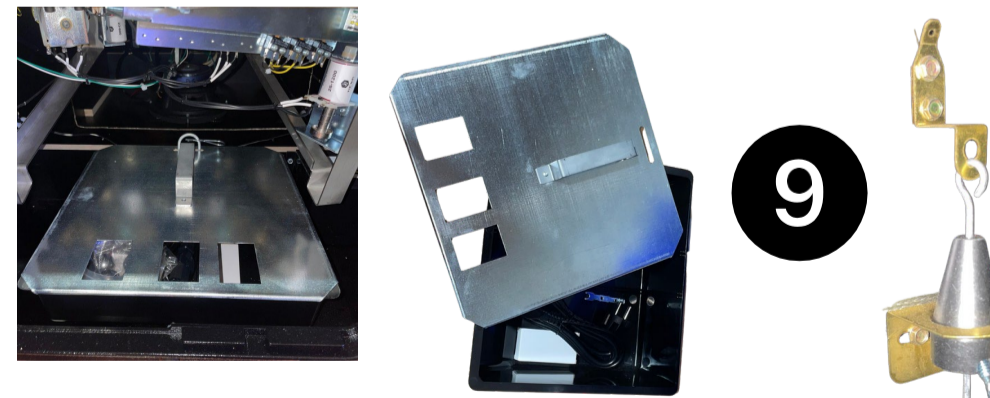

- 9**
- Behind the door you'll find a metal box containing the power cable and the pinball balls.
 - Remove the pin on the top of the crate, then take the crate out and open it.
 - The tilt is already installed in the box. Set it to the desired height. Raise or lower the plumb bob; the higher it is, the more sensitive it is to tilting. Tighten the screw by hand.

- 10**
- Take the four (4) pinball from the metal case and place them carefully on the tray so that they roll into the ball trough.
 - Reinsert the glass and reposition the lockbar. Lock it using the yellow handle.
 - **⚠ If it's not locked properly, you won't be able to close the door.**
 - Close the door.
 - Connect the pinball machine to the mains and turn it on using the switch located under the right-hand case.